



Surface Range Extender

Assembly Instructions

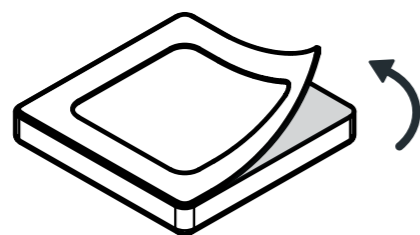


1

Peel the protective film from the back of the sensor.

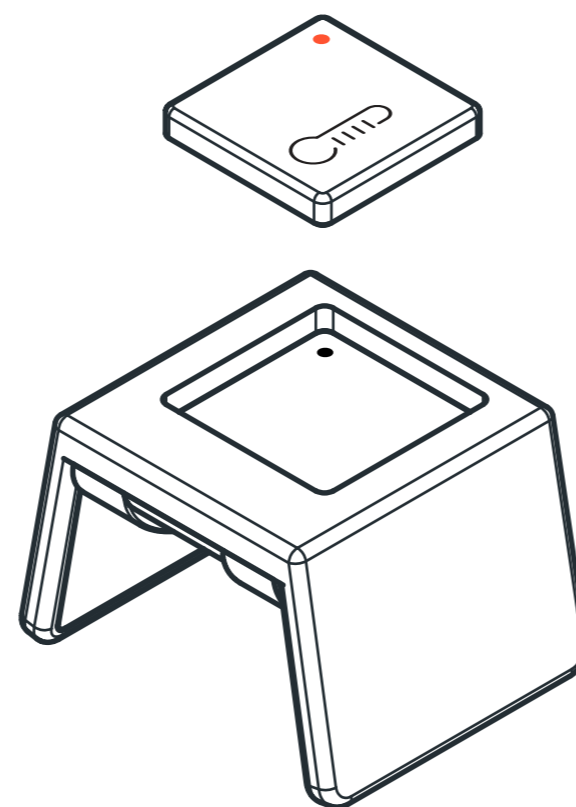


2

Orientation matters: Make sure the dot on the sensor is aligned with the dot on the range extender.

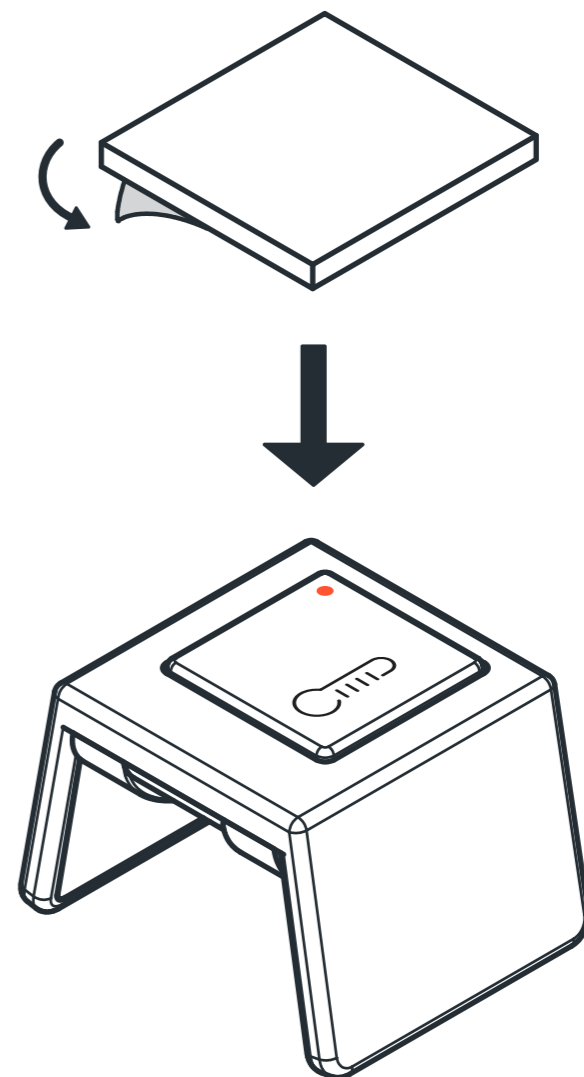

3

Attach the sensor to the range extender and place the thermal pad with the sticky side on top of it.

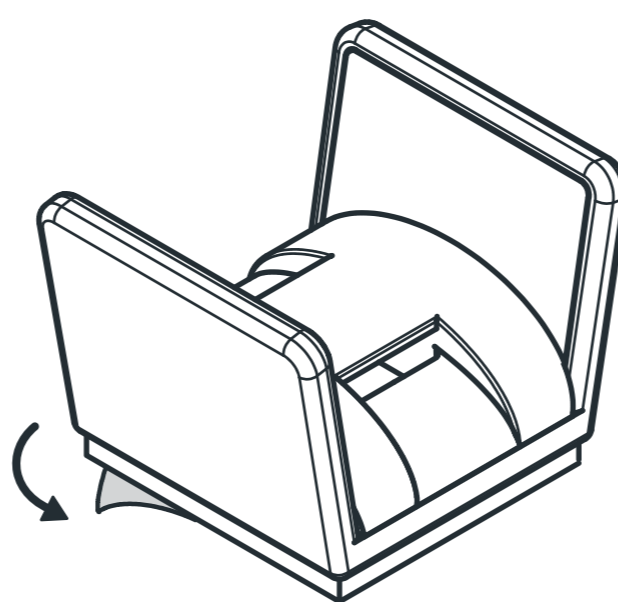

4

Remove the second protective film from the thermal pad and install it on a clean metal surface.